

Synology®

Synology Remote

User's Guide

Table of Content

 
Welcome	2
Synology Remote at a Glance	3
Getting Started	4
Playing Music from Your Synology Server	6
Listening to Internet Radio Station	6
Play Music from Your iPod	6
Managing Your Content	7
Appendix	7

**Other language versions of the User's Guide? Visit
www.synology.com/download**


Welcome

Congratulations on purchasing your Synology Remote.

Synology Remote works with your Synology Server. With USB speakers connected to your Synology Server, you can use the Synology Remote to play music stored on the Synology Server, from Internet Radio, or from your iPod.

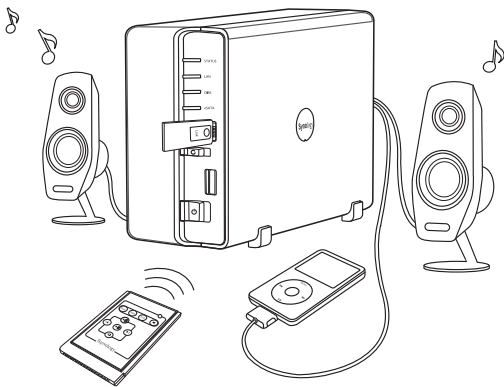

Synology Remote at a Glance

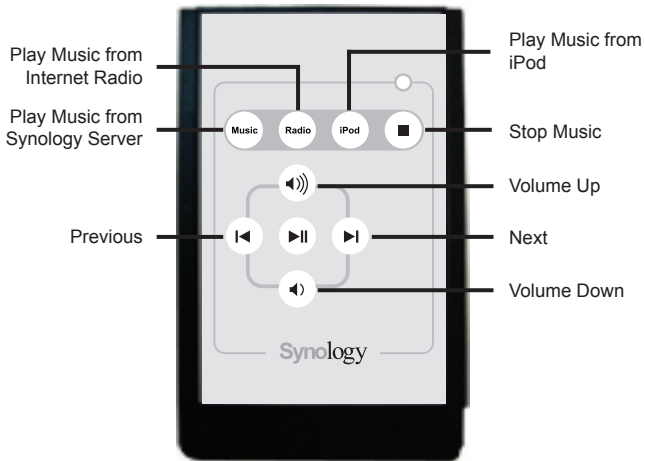 

Getting Started

Visit Synology Remote Site

 
1. Visit <http://www.synology.com/remote> for a complete guide of how to use Synology Remote, firmware download information, and supported USB speakers.

Upgrade Your Synology Server

1. Visit <http://www.synology.com/download> to download the compatible firmware.
2. Upgrade your Synology Server with the downloaded firmware.

Connect the USB speaker


1. Connect the prepared USB speaker to the USB port of Synology Server.

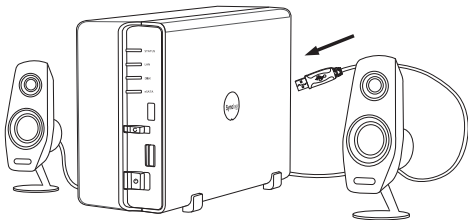

Getting Started


Connect the USB receptor

1. Detach the USB receptor from the Synology Remote. Connect it to any USB port on the Synology Server. (When plugging the receptor, please be sure the metal strips of the receptor are facing the metal strips of the USB inlet.)

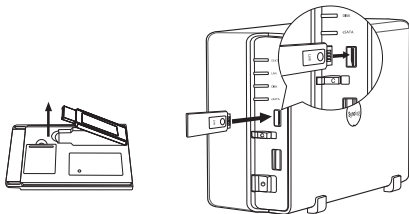

Install the Synology Remote battery

 1. Insert the remote control battery. Make sure the + side is facing up.

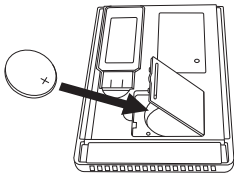

Ready to Go

Playing Music from Your Synology Server

 
1. Upload audio files to the “music” shared folder on your Synology Server.
2. Press the “Music” button on your Synology Remote.

Listening to Internet Radio Station

1. Press the “Radio” button on your Synology Remote.
- The default Internet radio station will begin to play.

Playing Music from Your iPod

1. Plug your iPod into the USB port on your Synology Server.
 2. Press the “iPod” button on your Synology Remote.
- Music on your iPod will play by the directory sequence.

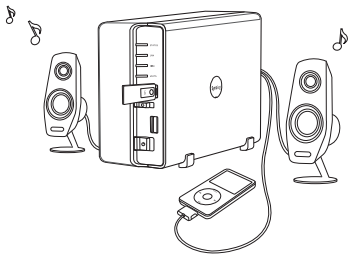

Managing Your Content

To manage your stored audio files and internet radio channels, go to the page:

"http://Server_IP:5000/audio"

Appendix

Recommended USB Speaker

For recommended USB speaker models, please visit www.synology.com/remote.

For information regarding your product's warranty, or complete feature introduction of Synology Audio Station, please visit www.synology.com

COPYRIGHT NOTICE

All title, copyright and other intellectual property rights in and to any Synology Products, the “Products” or “Product” (including but not limited to product design and appearance, firmware, and any relevant media, images, photographs, animations, video, audio, music, text, and applets incorporated into the Products), the accompanying manuals and other documents, and on-line or electronic documents, if any, are owned by Synology Inc. Unless otherwise expressly licensed by Synology Inc. in writing, any provision of the Products does not represent any license of any of the above rights.

Copyright © 2007 Synology Inc.; All rights reserved.

TRADEMARK NOTICE

Synology and other names of Synology Products are proprietary marks or registered trademarks of Synology Inc. Microsoft, Windows series, and Internet Explorer are trademarks of Microsoft Corporation. Apple, Mac, Mac OS series are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. Other products and company names mentioned herein are trademarks of their respective holders.

REVISIONS

Synology reserves all rights to revise or update its Products, other products, software, or related documentation without further notice.

Synology Inc. reserves the right to revise this publication and to make changes in the content hereof without the obligation to notify any person of such revision or changes.